


CME Product Catalog

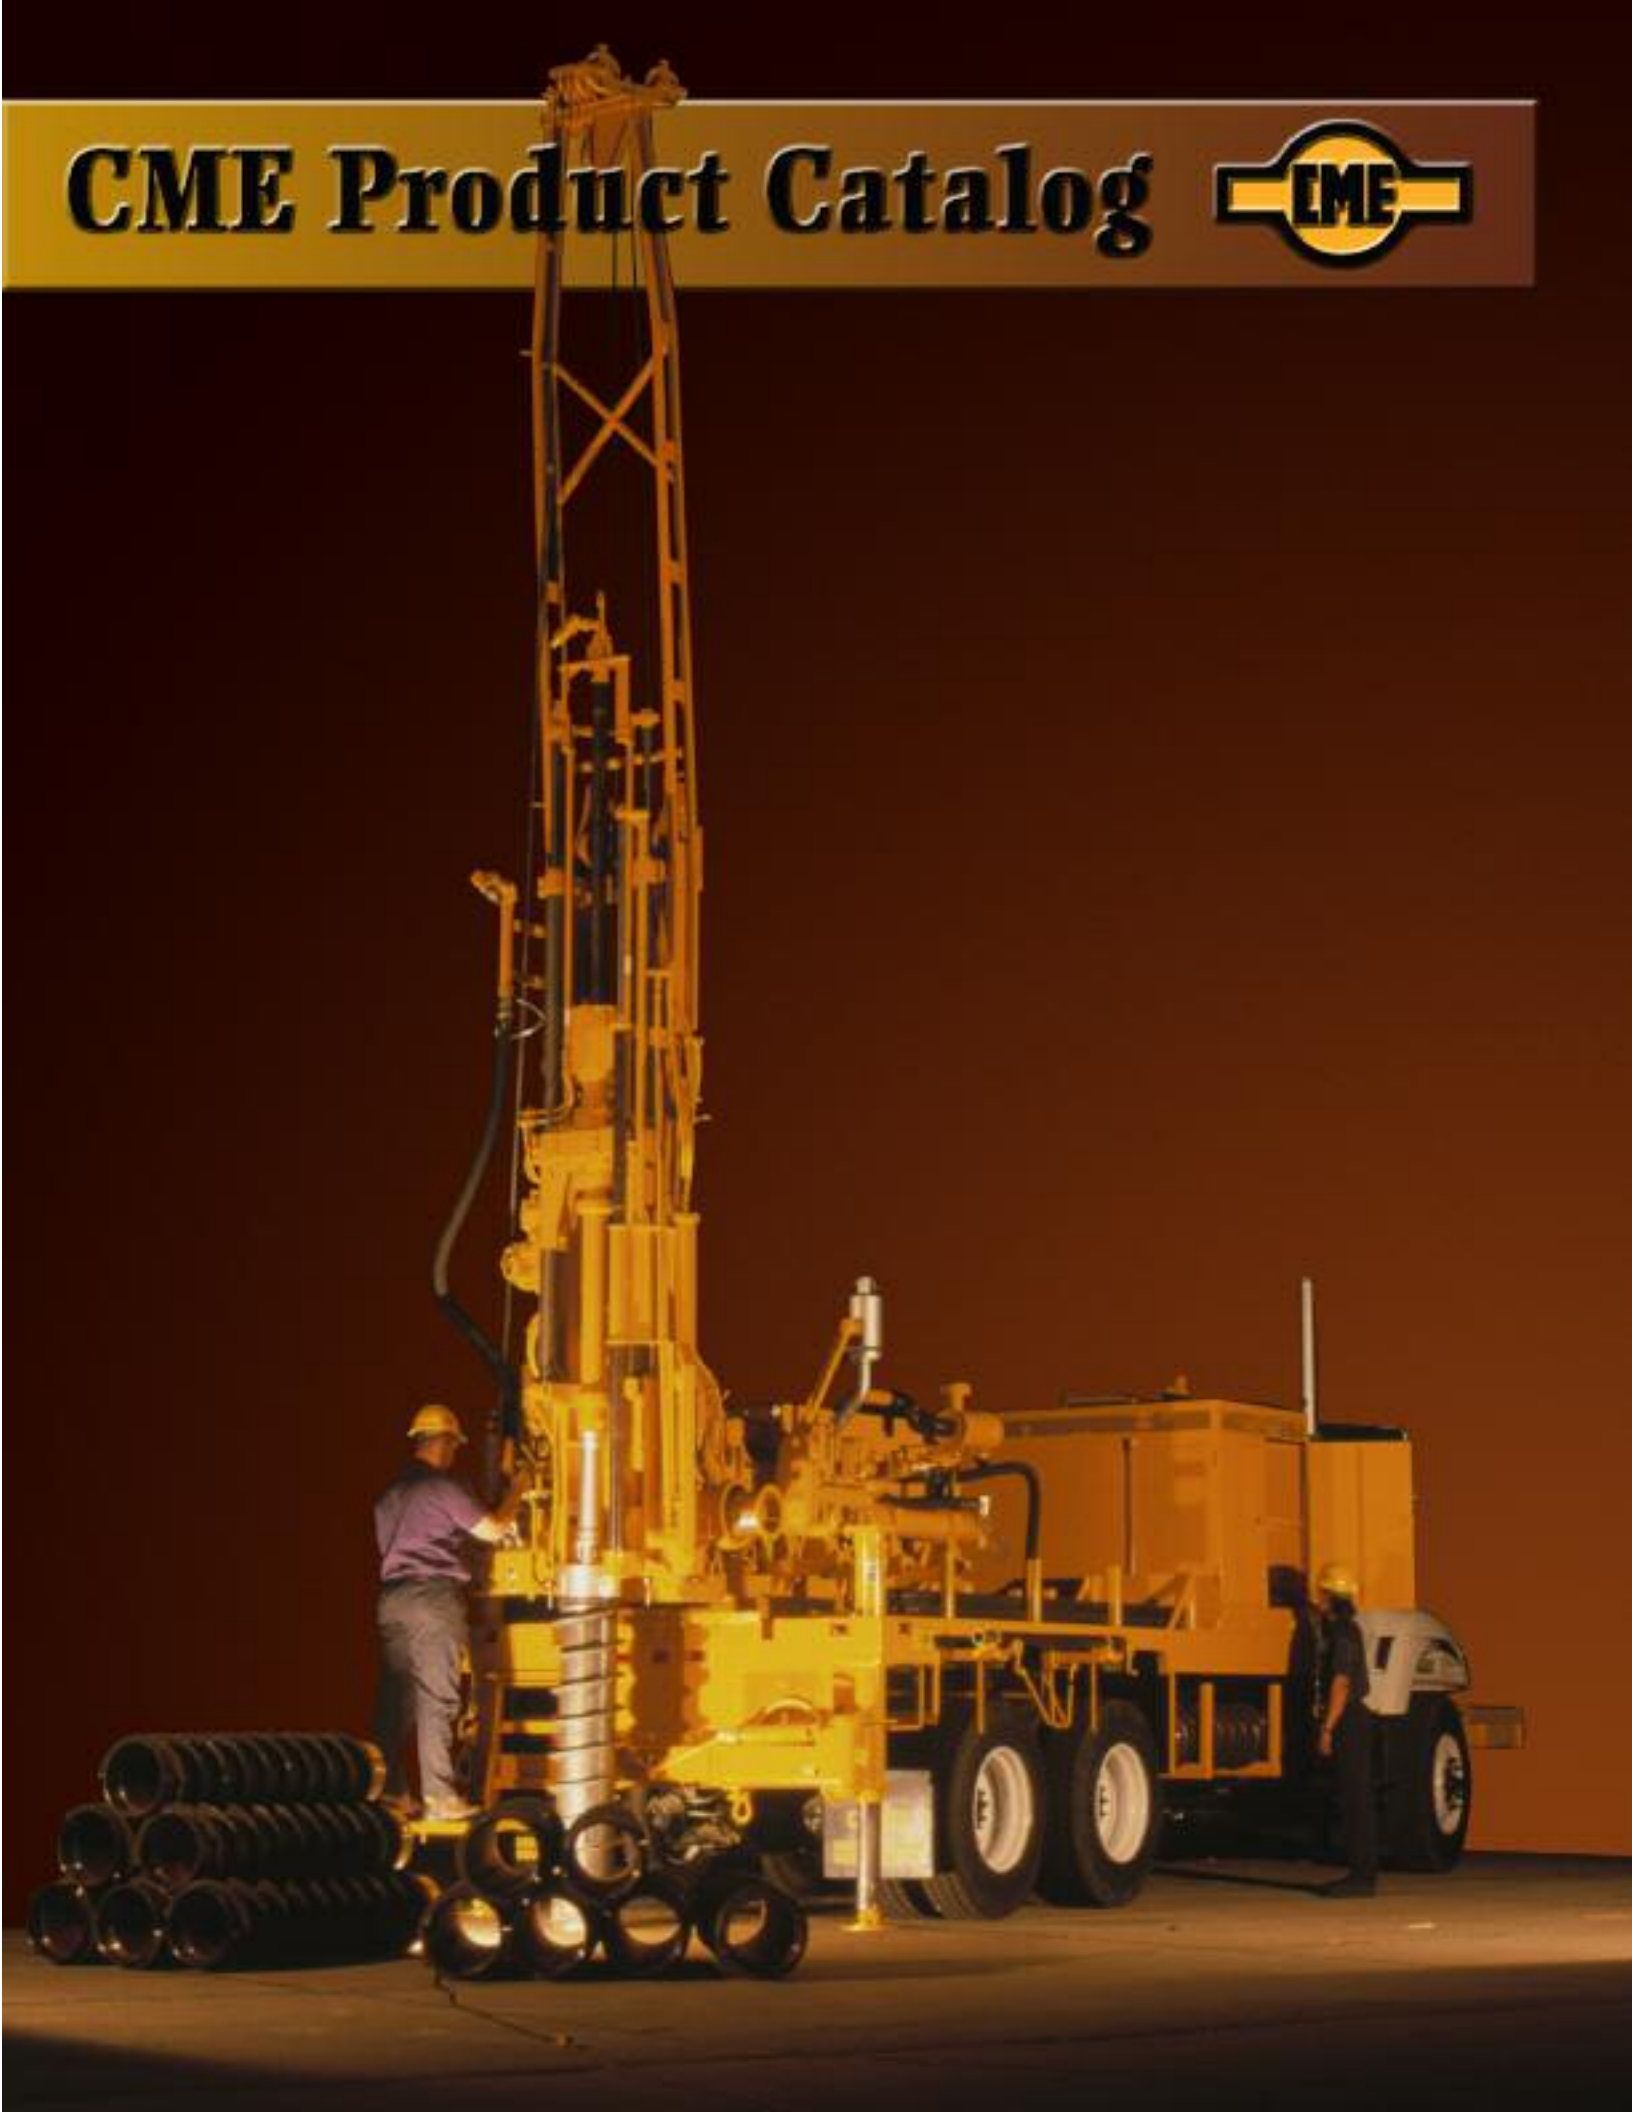

About CME.....	1.3
Drill Rigs.....	2.1
Augers.....	3.1
Flight Augers.....	3.44
Flight Auger Accessories.....	3.47
Flight Auger Heads.....	3.45
Hex Subs & Adapters.....	3.49
Hollow Stem Augers.....	3.2
Hollow Stem Accessories.....	3.30
Hollow Stem Auger Heads.....	3.35
Soil Sampling.....	4.1
Continuous Sample Tube Systems	
Bearing Head (ASTM D 4700).....	4.15
Stabilized (ASTM D 4700).....	4.23
Expendable Point Penetrometer.....	4.8
Pocket Penetrometer.....	4.8
Safety Type Drive Hammer (ASTM D 1586).....	4.9
2” Split Spoon Sampler - Heavy Duty (ASTM D 1586).....	4.2
2” Split Spoon Sampler - Standard (ASTM D 1586).....	4.3
2.5” Split Spoon Sampler (ASTM D 1586).....	4.3
3” Split Spoon Sampler (ASTM D 1586).....	4.4
Split Spoon Sampler Parts & Accessories.....	4.5
Stationary Piston Sampler (ASTM D 1587 & 4700).....	4.12
Thin Wall Shelby Tube Heads.....	4.10
Thin Wall Shelby Tubes & Accessories (ASTM D 1587).....	4.11
Drilling Tools.....	5.1
Casing - W Series Flush Joint.....	5.6
Casing Advancer.....	5.8
Casing Accessories.....	5.10
Drag Bits.....	5.19
Drill Rods.....	5.2
Drill Rod Clean Out Taps.....	5.33
Drill Rod Recovery Taps.....	5.32
Drill Rod Wipers.....	5.33
Hoisting Swivels.....	5.32
Kwik Klamps.....	5.30
Roller Rock Bits.....	5.18
Slip Rings & Holding Iron.....	5.31
Subs & Adapters.....	5.12
Water Swivels, Side Feed & Bail Type.....	5.20
Diamond Bits.....	6.1



Table of Contents

Core Drilling.....	7.1
Casing - W Series Flush Joint.....	7.50
Core Barrels	
Conventional Core Barrels	
NV, NV2, NV3	7.2
HV, HV3	7.8
PV, PV3	7.12
Wireline Core Barrels	
N W/L, N W/L2, N W/L3	7.16
Overshot N W/L	7.26
H W/L, H W/L3	7.28
Overshot H W/L	7.34
P W/L, P W/L3	7.36
Overshot P W/L	7.40
Core Boxes	7.65
Drill Rod (Wireline).....	7.42
Foot Clamp	7.63
Insta-Vis Plus	7.66
Kwik Klamps	7.62
Lubricants & Dope Brush	7.66
Punch Shoes	7.45
Subs & Adapters	7.46
Water Swivels, Side Feed & Bail Type	7.52
Wrenches - Full Circle	7.64
Ground Water Monitoring	8.1
Other Equipment	9.1
Miscellaneous.....	10.1

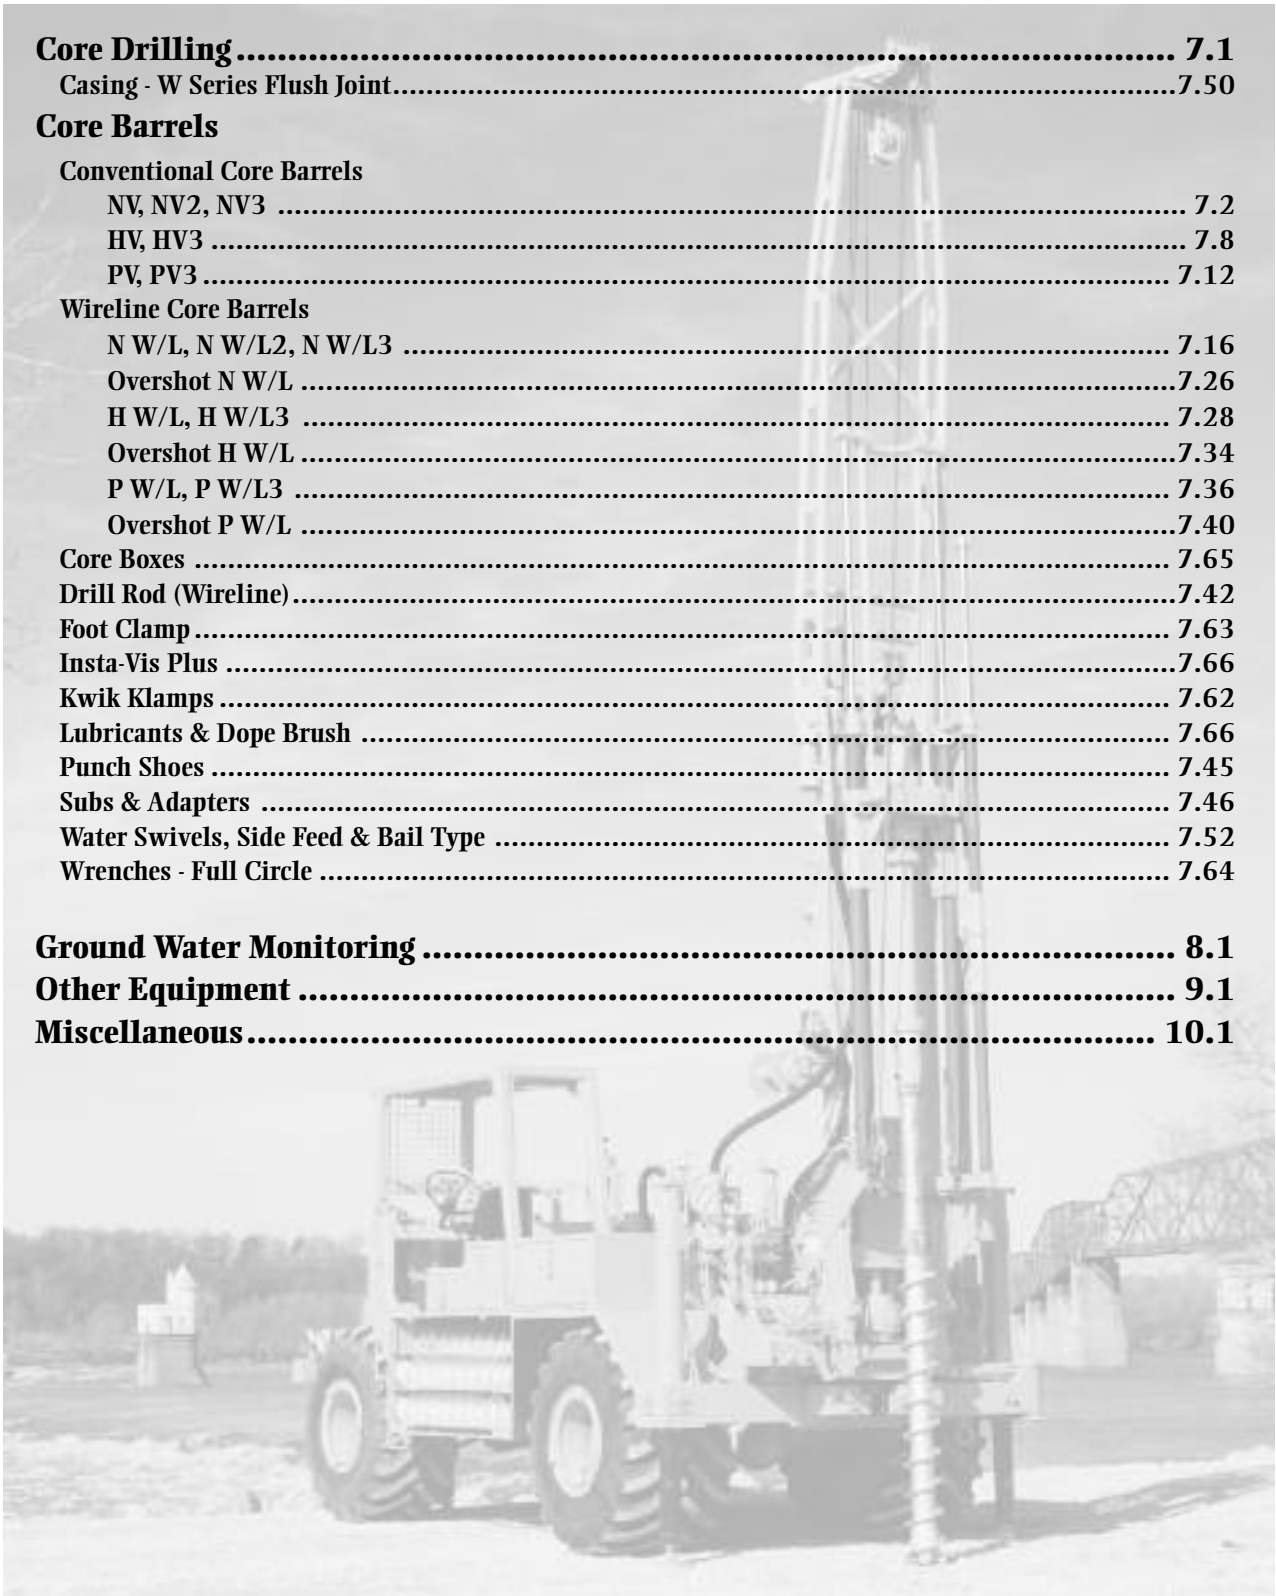




Table of Contents



VIEWING OPTIONS:

To make our catalog easier to read we recommend using a two page display, as some sections have one page for the exploded view and one for the parts listing. Changing these settings will allow you to see the exploded view and parts listing on the screen at the same time. This can be easily done with the following steps.

Adobe PDF Viewer

In Adobe PDF Viewer, from the main toolbar choose 'View', then 'Page Display', turn on 'Two-Up' and 'Show Cover Page During Two-Up'

FoxIt PDF Viewer

In FoxIt PDF Viewer, from the main toolbar choose 'View', then 'Page Display', turn on 'Facing' and 'Show Cover Page During Facing'

